


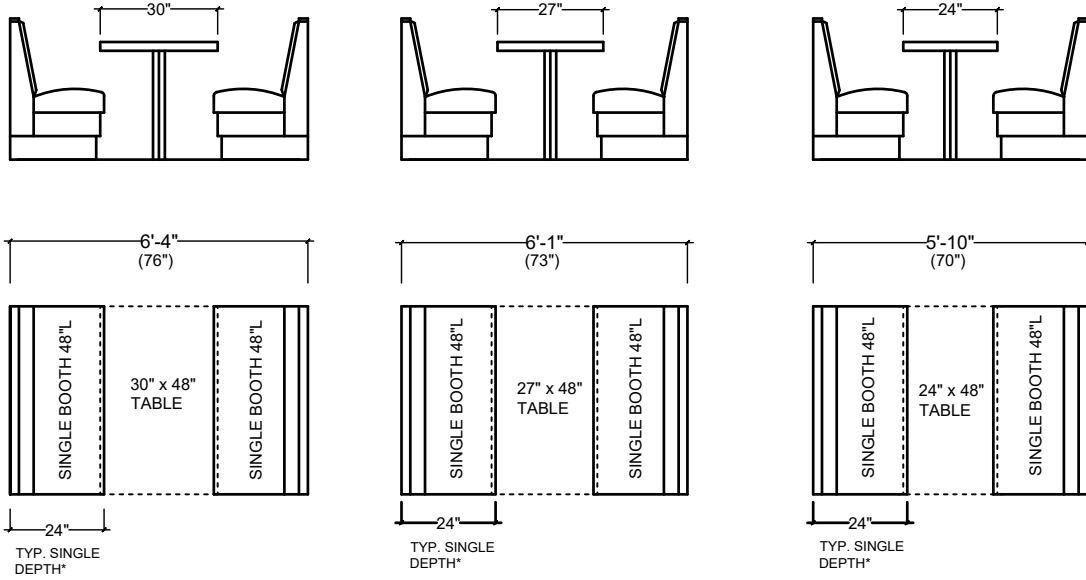

SPACING WHEN USING SINGLE BOOTHS ONLY



SPACING WHEN USING SINGLE & DOUBLE BOOTHS

